

## Shchedrina N.<sup>1,2</sup>

Ollier N.<sup>2</sup>, Mobasher M.<sup>2</sup>, Lancry M.<sup>1</sup>

<sup>1</sup> Institut de Chimie Moléculaire et des Matériaux d'Orsay, Université Paris-Saclay, Rue du doyen Georges Poitou, 91405 Orsay cedex, France

<sup>2</sup> Laboratoire des Solides Irradiés, École polytechnique-CEA-CNRS, 91128 Palaiseau Cedex, France nadezhda.shchedrina@universite-paris-saclay.fr

## *In Situ* Raman Spectroscopy during Annealing for Calculation of the Activation Energy Distribution in Densified Silica Glass

Densified silica glass, having enhanced mechanical and unique optical properties, serves critical roles in extreme environments as a material for various applications, such as optical sensors. In this study, a set of samples were prepared and analyzed using Raman spectroscopy. The range includes the same high-pressure, high-temperature (HP-HT) treated sample subjected to three different irradiation doses - 0, 107 Gy, and 11 GGy. Additionally, metamict-like samples obtained under two distinct conditions - 11 GGy with and without HPHT treatment – were compared. In this study, alterations in Raman spectra, particularly in the D<sub>2</sub> band linked to 3-membered rings in silica's matrix, serve as indicators of structural transformations in the glass during annealing. Utilizing a 'master curve' approach derived from these annealing curves, we assess the distribution of activation energy, offering a dependable method for forecasting the longevity of density properties. Samples were subjected to isothermal annealing, during which their Raman spectra were continuously monitored in realtime. The annealing was carried out at 3 temperatures between 825°C and 900°C, each for a duration of 18 hours. We used a Horiba Jobin Yvon LabRam HR 800 spectrometer. Our findings indicate that despite similar activation energy distribution widths (~0.6 eV) for both samples, the central energy was notably higher for the HP-HT treated 11 GGy sample (2.87 eV) than for the solely irradiated SiO<sub>2</sub> 11 GGy sample (1.89 eV). This suggests greater thermal stability and thus internal structure for densified silica glass subjected to HP-HT conditions. For the densified sample and the low-dose irradiated sample, we observe a bimodal activation energy distribution. This unveils the role of the high-density amorphous (HDA) transition phase in influencing the D<sub>2</sub> Raman band's non-monotonous behavior in low-irradiated densified samples. Electron irradiation appears to minimize these HDA states, leading to a transition to a lower-density amorphous (LDA) structure.

## References

[1] Poumellec, B., "Links between writing and erasure (or stability) of Bragg gratings in disordered media". Journal of non-crystalline solids, 239 (1998) 108-115

**Figures** 

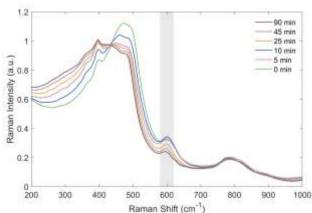


Figure 1: Evolution of Raman spectra during isothermal annealing at 850 °C of HP-HT SiO<sub>2</sub> sample irradiated at 10<sup>7</sup> Gy at different annealing times.